

Nokia DCT3 Clip Manual

UNLOCK and REPAIR

1. Phone without simcard.
2. Turn off the phone.
3. Connect clip and turn it on.
4. LED will blink continuously.
5. After a moment led will stop blink continuously and start to blink fast.
6. Phone is resetting.
7. Phone is unlocked

8. Rapidly disconnect clip or...
9. LED will start blink slower and phone will reset again.
10. Last 4 digits of IMEI are changed (randomizly)

www.techgsm.com