

## **Nokia DCT3/4 Clip User Manual**

1. Connect the connecting cable (USB-PS2) to the cable connector required to unlock eg. 8210 connector.
2. Connect the phone to the connector and power the phone "ON".
3. Insert 4 "AA" batteries into the clip.
4. Switch "ON" the clip by the switch on the side of the box.
5. The power led (first led on the right) will light up when clip is power "ON".
6. On top of the leds, there are 2 switches , press either switch and then the second led will start to blink meaning that the clip is unlocking the phone. When unlocking is done, all 4 leds will light up at the same time. Press the other switch if the first switch does not work.
7. Take note for 8310 phone, when you connect the phone to the cable and power on , you must see "Local mode" on the phone screen; if not push the switch by the side of the connector and you will see it.

(c)TechGSM

[www.techgsm.com](http://www.techgsm.com)